

HDMI TFT Module Specification



MODEL: HU-043WISBUAA0-B

- < >> PRELIMINARY SPECIFICATION



<>> APPROVAL SPECIFICATION

CUSTOMER
APPROVED BY
DATE:

DESIGNED	CHECKED	APPROVED
RD	PM	批准
2019.09.07	2019.09.08	2019.09.08
鄭允勝	呂家祥	PM

DigiWise International Corporation 3F., No. 10, Ln 83, Sec 1, Guang Fu Rd., Sanchong Dist., 24158, New Taipei City, Taiwan (ROC)

TEL:+886-2-29992866 FAX: +886-2-29990900



RECORD OF REVISION

Version	Revised Date	Page	Content
V1.0	2019/09/07		First Issued



TABLE OF CONTENTS

No. Content Page HDMI TFT Module Specification1 1. 2. 3. ABSOLUTE MAXIMUM RATINGS7 4. 5. 6. 7. 8. 9. 10.



1. GENERAL DESCRIPTION

1.1 Description

HU-043WISBUAA0-B is a 4.3 (16:9) inch diagonally measured active display with high resolution WXGA 800x480 display and high brightness. This model is composed of a TFT LCD panel, backlight system, a projected capacitive touch panel and HDMI interface. It is designed to make Raspberry Pi usage easy. You can simply use this TFT display with your Raspberry Pi, or also you can use this as computer display with any device which has HDMI output. This 4.3" TFT model comes in 800x480 resolution that would be great for embedded computing usage too.

1.2 Features:


No.	ltem	Specification	Unit
1	Panel Size	4.3"	Inch
2	Number of Pixels	800 (W) x RGB x 480 (H)	Pixels
3	Active Area	95.04 (W) × 53.856 (H)	mm
4	Pixel Pitch	0.1188 (W) x 0.1122 (H)	mm
5	Outline Dimension	105.5 (W) × 67.2 (H) × 18.6 (T)	mm
6	Number of Colors	16.7M	
7	Display Mode	IPS / Normally Black / Transmissive	
8	View Direction	Free direction	
9	Display Format	Display Format RGB vertical stripe	
10	Surface Treatment	Surface Treatment Clear (7H)	
11	Contrast Ratio 800 (Typ.)		
12	Luminance (cd/m^2)	450 (Typ.)	cd/m2
13	Video Input Interface	HDMI	
L)		(Compliance HDMI V1.4 and include HDCP decryption)	
14	Backlight	White LED	
15	Operation Temperature	-30 ~ 70	°C
16	Storage Temperature	-30 ~ 80	°C
17	Weight	TBD	g



www.digiwise.asia

E-mail: sales@digiwise.asia

2. MECHANICAL SPECIFICATION

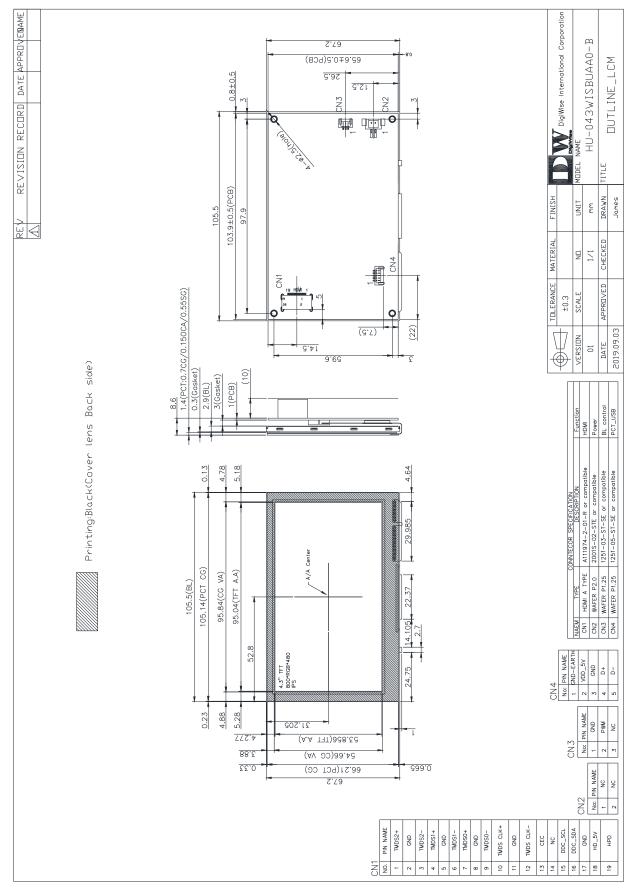



3. PIN DESCRIPTION

3.1 HD	MI (CN1)		[HDMI A TYPE: A111974-2-01-R or compatible]				
Pin No.	Symbol	I/0	Function	Note			
1	TMDS 2+		TMDS Data2+				
2	GND	Р	TMDS Data2 Shield				
3	TMDS 2-	I	TMDS Data2-				
4	TMDS 1+	I	TMDS Data1+				
5	GND	Р	TMDS Data1 Shield				
6	TMDS 1-	I	TMDS Data1-				
7	TMDS 0+	I	TMDS Data0+				
8	GND	Р	TMDS Data0 Shield				
9	TMDS 0-	I	TMDS Data0-				
10	TMDS CLK+	I	TMDS Clock+				
11	GND	Р	TMDS Clock Shield				
12	TMDS CLK-	I	TMDS Clock-				
13	CEC	I	CEC				
14	N.C.	-	N.C.				
15	DDC_SCL	I	IIC SCL to EDID ROM				
16	DDC_SDA	I/0	IIC SDA to EDID ROM				
17	GND	Р	DDC/CEC Ground				
18	HD_5V	Р	+5V Power				
19	HPD	0	Hot Plug Detect				

3.2 Power Input and PCT Control (CN4) [WAFER P1.25mm: 1251-05-ST-SE or compatible]

Pin No.	Symbol	I/O	Function	Note
1	GND -EARTH	Ρ	Earth Ground(Shield)	
2	VDD_5V	Р	Power supply +5V for LCM and USB I/F	
3	GND	Р	Power Ground	
4	D+	1/0	USB data +	
5	D-	1/0	USB data -	

3.3 Back-light Control(CN3) [WAFER P1.25mm: 1251-03-ST-SE or compatible]

Pin No.	Symbol	I/O	Function	Note
1	GND	Р	Ground	
2	PWM	I	Back-light Dimming control (internal pull up to 3.3V)	*1
3	NC	-	No connection.	



4. ABSOLUTE MAXIMUM RATINGS

4.2 Electrical Absolute Rating

4.2.1 HDMI TFT LCD Module

ltom	Symbol		lues	Unit	Note
ltem	Symbol	Min	Max.	Unit	Note
Power supply voltage	5.0V	4.5	5.5	V	


4.2.2 Environment Absolute Rating

ltom	Itom Symbol		Values	Unit	Noto	
ltem	Symbol	Min	Тур	Max.	Unit	Note
Operating Temperature	Тор	-30	-	70	°C	Ambient
Storage Temperature	Tst	-30	-	80	°C	temperature



www.digiwise.asia E-mail: sales@digiwise.asia

- 5. BLOCK DIAGRAM
 - 5.2 TFT LCD Module

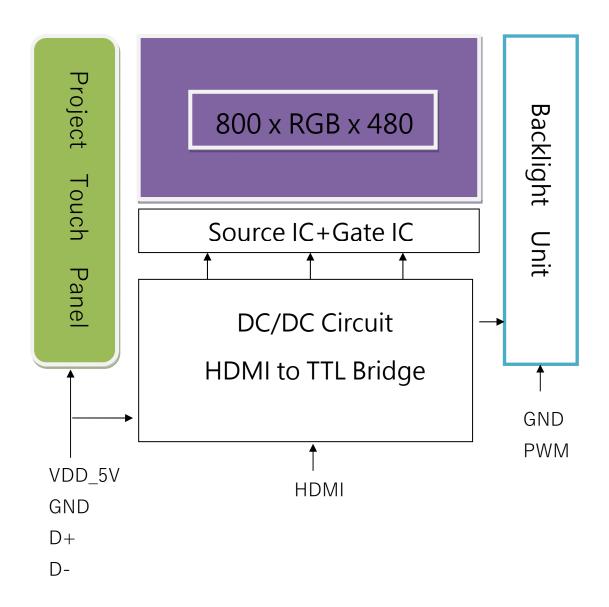



6. ELECTRICAL CHARACTERISTICS

6.2 HDMI TFT LCD Module

ltem	Symbol		Values	Unit	Note	
item	Symbol	Min	Тур.	Max.	Unit	NOLE
Supply Voltage	5.0V	4.5	5	5.5	۷	
PWM frequency		200	-	200K	Hz	
PWM Dimming	Vpwm-ih	2	3.3	5	۷	
Voltage	VPWM-IL	-	-	0.8	٧	
Supply Current	ICC(5V)	-	TBD	-	mA	
LED life time		-	50000	-	Hr	(1)

Note 1:

The "LED life time" is defined as the module brightness decrease to 50% original brightness that the ambient temperature is 25° C 60% RH.



www.digiwise.asia

E-mail: sales@digiwise.asia

7. POROJECTED CAPACITIVE TOUCH PANEL SPECIFICATION

7.1 Main Feature

ltem	Specification	Unit
Screen Size	4.3 inch	Diagonal
Туре	Transparent Type Projected Capacitive	
Input Mode	Human's Finger	
Finger	5	
Interface	USB 2.0	
Operating system OS	Windows / Linux / Android	
Cover glass pencil-hardness	7H	
Response time	25	ms
Driver IC	FT5426	



www.digiwise.asia


E-mail: sales@digiwise.asia

8. OPTICAL CHARACTERISTICS

ltem		Symbol	Condition	Min.	Тур.	Max.	Unit
Bright	ness			360	450		cd/m2
Unifor	mity	B-uni	Note1, Note 3,	70	75	-	%
Contrast	Ratio	CR	$(\theta = 0^{\circ},$	640	800		
Response	e Time	Tr + Tf	Normal		30	40	ms
Color	White	Wx	Viewing Angle)	0.260	0.310	0.360	
Chromaticity	white	Wy	Ang(C)	0.280	0.330	0.380	
	Horizontal	θ x +		70	80		
View angle	ΠΟΠΖΟΠΙΔΙ	θ x -	Center	70	80		
View angle	Vertical	θ Y +	CR≥10	70	80		
	vertical	θ Υ-		70	80		

Note : The following optical specifications shall be measured in a darkroom or equivalent state(ambient luminance $\leq 1 \text{ lux}$, and at room temperature). The operation temperature is 25°C±2°C. The measurement method is shown in Note1.

Note1: The method of optical measurement:

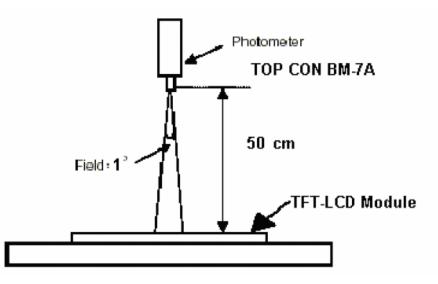

Note2: Measured at the center area of the panel and at the viewing angle of the $\theta x = \theta y$ =0°

Note3: Definition of Contrast Ratio (CR):


CR = Luminance with all pixels in white state \div Luminance with all pixels in Black state





www.digiwise.asia

E-mail: sales@digiwise.asia

Note 4: Definition of Viewing Angle:

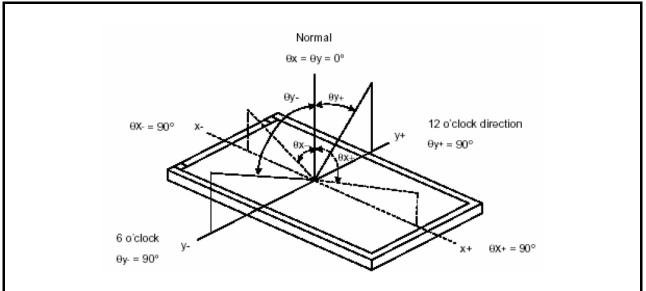



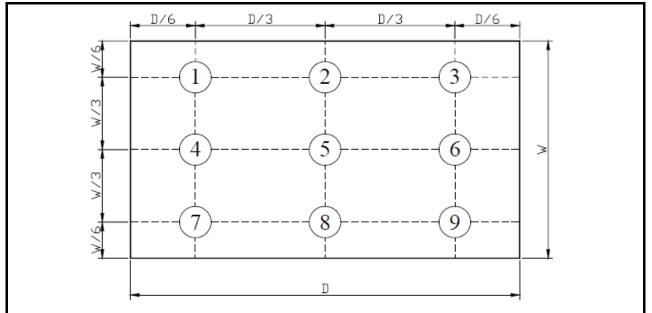


B-uni = (Minimum luminance of 9 points÷Maximum luminance of 9points)X100%



www.digiwise.asia E-mail: sales@digiwise.asia

Note 6: Definition of Response Time:

The Response Time is set initially by defining the "Rising Time (Tr)" and the "Falling Time (Tf)" respectively. Tr and Tf are defined as following figure

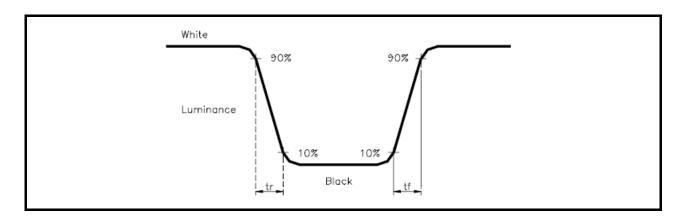

Note 7: Definition of Chromaticity:

The color coordinates (Wx,Wy),(Rx,Ry),(Gx,Gy),and (Bx,By) are obtained with all pixels in the viewing field at white, red, green, and blue states, respectively.



9. RELIABILITY

9.1 Test Condition

9.1.1 Temperature and Humidity(Ambient Temperature) Temperature : $25 \pm 5^{\circ}$ C Humidity : $65 \pm 5^{\circ}$

9.1.2 Operation Unless specified otherwise, test will be conducted under function state.

- 9.1.3 ContainerUnless specified otherwise, vibration test will be conducted to the product itself without putting it in a container.
- 9.1.4 Test Frequency In case of related to deterioration such as shock test. It will be conducted only once.

9.2	TESTS
· · -	

No.	ITEM	CONDITION CRITERION	
1	High Temperature Storage	80°C, 120 hrs	
2	Low Temperature Storage	-30°C, 120 hrs	
3	High Temperature Operating	70°C, 120 hrs	
4	Low Temperature Operating -30°C, 120 hrs		
5	High Temperature/Humidity Non-Operating	40°C, 90%RH, 120 hrs	
6	Temperature Shock Non-Operating	$-30^{\circ}C \leftrightarrow 80^{\circ}C$ (0.5hr each), 100 cycles	
7	Vibration Test Non-Operating	Frequency:0 ~ 55 Hz Amplitude:1.5 mm Sweep Time:11min Test Period:6 Cycles for each Direction of X,Y,Z	
8	Electro-static Discharge	\pm 2KV, Human Body Mode, 100pF/1500 Ω	

Note1: The test sample have recovery time for 24 hours at room temperature before the function check. In the standard conditions, there is no any touch panel function NG issue occurred.



9.3 JUDGMENT STANDARD

The judgment of the above test should be made as follow:

- Pass: Normal display image with no obvious non-uniformity and no line defect. Partial transformation of the module parts should be ignored.
- Fail: No display image, obvious non-uniformity, or line defects.



www.digiwise.asia

E-mail: sales@digiwise.asia

9.4 INCOMING INSPECTION STANDARDS

No. Parameter Criteria Display function: No Display malfunction (Major) Contrast ratio (Black, White): Does not meet specified range in the spec. (Major) (Not Line Defect: No obvious Vertical and Horizontal line def dark and colored. (Major) (Note:1) Point Defect : Active area ≤ 5 dots (Minor) (Note:1) Item Acceptable number Item Active Area Bright 2 Dark 4	te:3) ect in bright, T
Does not meet specified range in the spec. (Major) (Noticitation in the specified range in the spec. (Major) (Noticitation in the specified range in the spec. (Major) (Noticitation in the specified range in the spec. (Major) (Note:1) Point Defect : No obvious Vertical and Horizontal line defined and colored. (Major) (Note:1) Point Defect : Active area ≤ 5 dots (Minor) (Note:1) Item Acceptable number Item Active Area Bright 2 Dark 4	te:3) ect in bright, ⊺
Does not meet specified range in the spec. (Major) (Note: 1) Line Defect: No obvious Vertical and Horizontal line defect area and colored. (Major) (Note: 1) Point Defect : Active area ≤ 5 dots (Minor) (Note: 1) Item Acceptable number Item Active Area Bright 2 Dark 4	te:3) ect in bright,
Line Defect: No obvious Vertical and Horizontal line def dark and colored. (Major) (Note:1) Point Defect : Active area ≤ 5 dots (Minor) (Note:1) Item Acceptable number Item Active Area Bright 2 Dark 4	ect in bright,
dark and colored. (Major) (Note:1) Point Defect : Active area ≤ 5 dots (Minor) (Note:1) Item Acceptable number Active Area Bright 2 Dark 4	, ,
Point Defect : Active area ≤ 5 dots (Minor) (Note:1) Item Acceptable number Item Active Area Bright 2 Dark 4	Т
Item Acceptable number Total Bright 2 5 Dark 4	Т
Item Active Area Total Bright 2 5 Dark 4	
Bright 2 5 1 Operating	
1 Operating	4
Dark 4 1 Operating	
1 Operating	
Non-uniformity: Visible through 5%ND filter. (Minor)	
Foreign material in Black or White spots shape (W>1/4	L)
Zone Accentable Class	
Acceptable Of A	QL
Dimension number Defects	evel
D> 0.5 0	
	1.5
	1.5
D ≤ 0.3 *	
D = (Long + Short) / 2 * : Disregard	
Foreign Material in Line or spiral shape (W≤1/4L) (Not	e: 4)
Zone Acceptable Class	AQL
L >5 W>0.1 0	
0.5 < L ≤ 5 0.03 < W≤0.1 5 Minor	1.5
L ≤0.5 W≤0.03 *	
L : Length W : Width * : Disregard	I
Dimension: Outline (Major)	
Bezel appearance: uneven (Minor)	
Scratch on the polarize: (Note:2)	
	AQL
W>0.1 0 Minor	1.5
L ≤ 3 W≤0.1 3	
External Inspection L : Length W : Width * : Disregard	
2 (non-operating) Dent or bubble on the polarize (Note:2)	
	1
Acceptable Of AQL	
Dimension number Defects Level	
	+
Minor 15	
1 1120 L 9	1
D≤0.5 3 Ninor 1.5	
D≤0.5 3	
D≤0.5 3 D = (Long + Short) / 2 * : Disregard	
D≤0.5 3	



			Definition
Class of defects	Major	AQL 0.65%	It is a defect that is likely to result in failure or to reduce materially the usability of the product for the intended function.
	Minor	AQL 1.5%	It is a defect that will not result in functioning problem with deviation classified.

Note1:

(a)Bright point defect is defined as point defect of R,G,B with area >1/2 pixel respectively (b)Dark point defect is defined as visible in full white pattern.

(c)Definition of distribution of point defect is as follows:

-minimum separation between dark point defects should be larger than 5mm.

-minimum separation between bright point defects should be larger than 5mm.

(d)Definition of joined bright point defect and joined dark point defect are as follows:


-Two or more joined bright point defects must be nil.

- -Three joined dark point defects must be nil.
- -Coupling of one dark and one bright point in junction is counted as one dark and bright spot with 1 pair maximum.
- -Two Joined dark point is counted as two dark points with 2 pair maximum.

Note2: The external inspection should be conducted at the distance $30\pm$ 5cm between the eyes of inspector and the panel.

Note3: Luminance measurement for contrast ratio is at the distance $50\pm$ 5cm between the detective head and the panel with ambient luminance less than 1 lux. Contrast ratio is obtained at optimum view angle.

Note4: W-Width in mm , L-length of Max.(L1,L2) in mm.

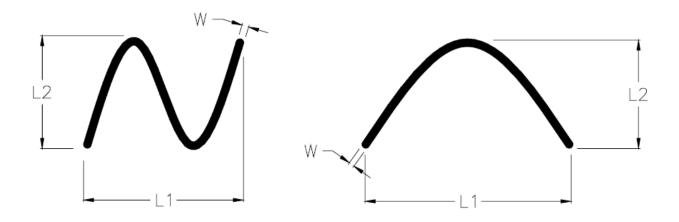



9.5 Sampling Condition

Unless otherwise agree in written, the sampling inspection shall be applied to the incoming inspection of customer.

Lot size: Quantity of shipment lot per model.

Sampling type: normal inspection, single sampling

Sampling table: MIL-STD-105E


Inspection level: Level II

9.6 Inspection conditions

The LCD shall be inspected under 40W white fluorescent light.

 $\theta \leq 45^{\circ}$ inspection under non-operating condition.

 $\theta \leq \mathbf{5}^{\circ}$ inspection under operating condition

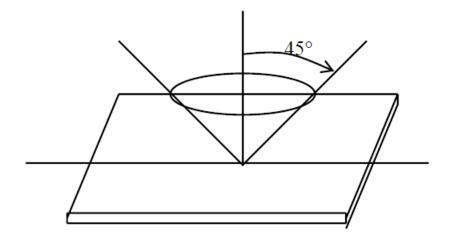



10. PRECAUTION RELATING PRODUCT HANDLING

- 10.1 SAFETY
- 10.1.1 If the LCD panel breaks , be careful not to get the liquid crystal to touch your skin.
- 10.1.2 If the liquid crystal touches your skin or clothes , please wash it off immediately by using soap and water.
- 10.2 HANDLING
- 10.2.1 Avoid any strong mechanical shock which can break the glass.
- 10.2.2 Avoid static electricity which can damage the CMOS LSI—When working with the module, be sure to ground your body and any electrical equipment you may be using.
- 10.2.3 Do not remove the panel or frame from the module.
- 10.2.4 The polarizing plate of the display is very fragile. So , please handle it very carefully, Do not touch, push or rub the exposed polarizing with anything harder than an HB pencil lead (glass , tweezers , etc.)
- 10.2.5 Do not wipe the polarizing plate with a dry cloth, as it may easily scratch the surface of plate.
- 10.2.6 Do not touch the display area with bare hands , this will stain the display area.
- 10.2.7 Do not use ketonics solvent & aromatic solvent. Use with a soft cloth soaked with a cleaning naphtha solvent.
- 10.2.8 To control temperature and time of soldering is $280 \pm 10^{\circ}$ C and 3-5 sec.
- 10.2.9 To avoid liquid (include organic solvent) stained on LCM.
- 10.3 STORAGE
- 10.3.1 Store the panel or module in a dark place where the temperature is $25^{\circ}C \pm 5^{\circ}C$ and the humidity is below 65% RH.
- 10.3.2 Do not place the module near organics solvents or corrosive gases.
- 10.3.3 Do not crush, shake, or jolt the module.



Contact details

The Netherlands	Belgium	UK & Ireland
Elektrostraat 17 NL-7483 PG Haaksbergen	Zuiderlaan 14 bus 10 B-1731 Zellik	St. Mary's House, Church Lane Carlton Le Moorland Lincoln LN5 9HS
T: +31 (0)53 573 33 33 F: +31 (0)53 573 33 30 E: nl@texim-europe.com	T: +32 (0)2 462 01 00 F: +32 (0)2 462 01 25 E: belgium@texim-europe.com	T: +44 (0)1522 789 555 F: +44 (0)845 299 22 26 E: uk@texim-europe.com
Germany North	Germany South	Austria
Bahnhofstrasse 92 D-25451 Quickborn	Martin-Kollar-Strasse 9 D-81829 München	Warwitzstrasse 9 A-5020 Salzburg
T: +49 (0)4106 627 07-0 F: +49 (0)4106 627 07-20 E: germany@texim-europe.com	T: +49 (0)89 436 086-0 F: +49 (0)89 436 086-19 E: germany@texim-europe.com	T: +43 (0)662 216 026 F: +43 (0)662 216 026-66 E: austria@texim-europe.com
Nordic region	Italy	General information
Sdr. Jagtvej 12 DK-2970 Hørsholm	Via Matteotti 43 IT-20864 Agrate Brianza (MB)	info@texim-europe.com
T: +45 88 20 26 30 F: +45 88 20 26 39 E: nordic@texim-europe.com	T: +39 (0)39 971 3293 F: +39 (0)39 971 3293 E: italy@texim-europe.com	www.texim-europe.com





